

FIG. 1

FIG. 2

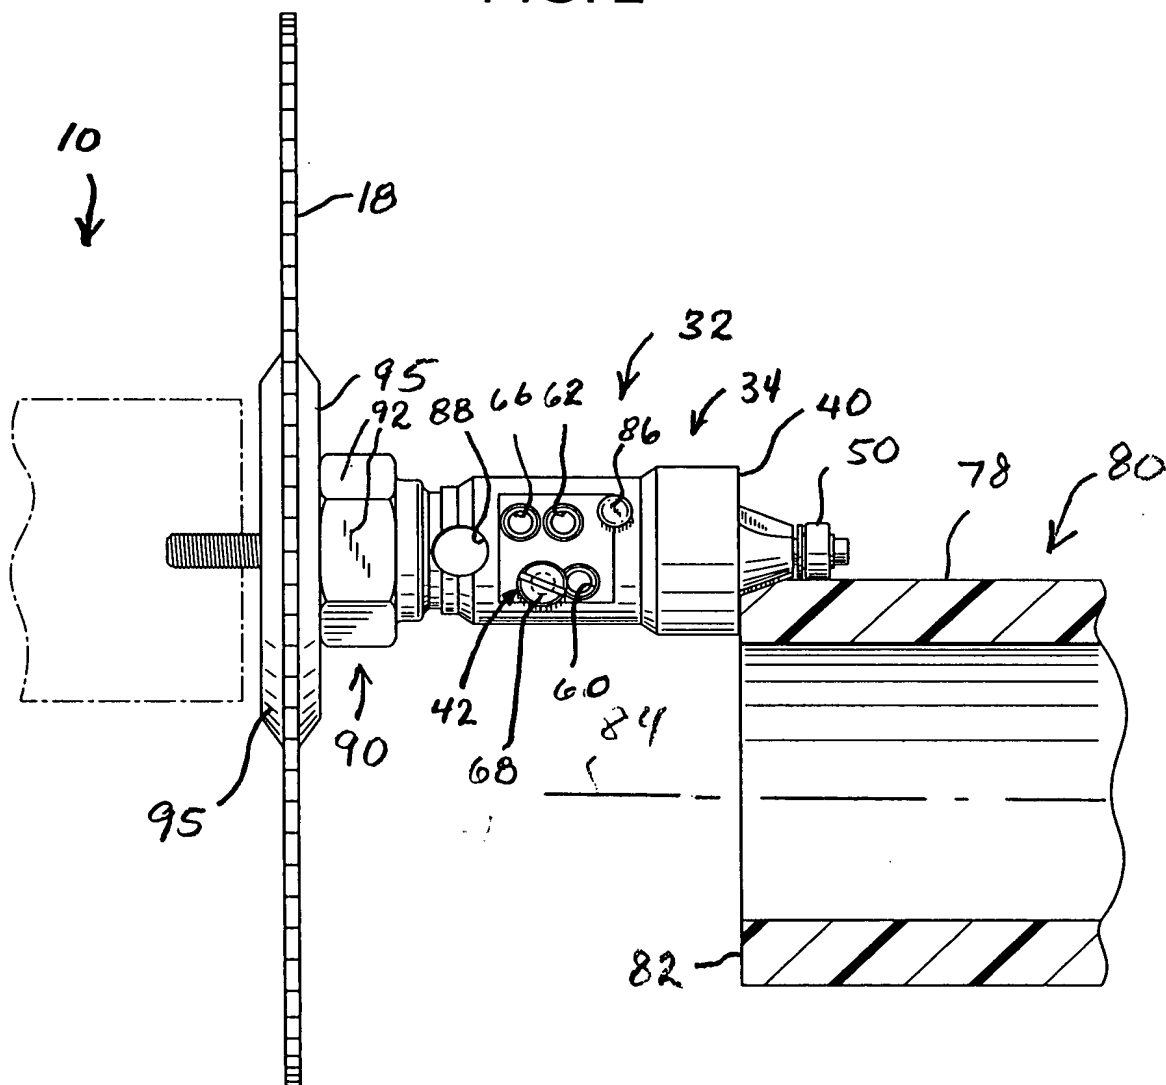
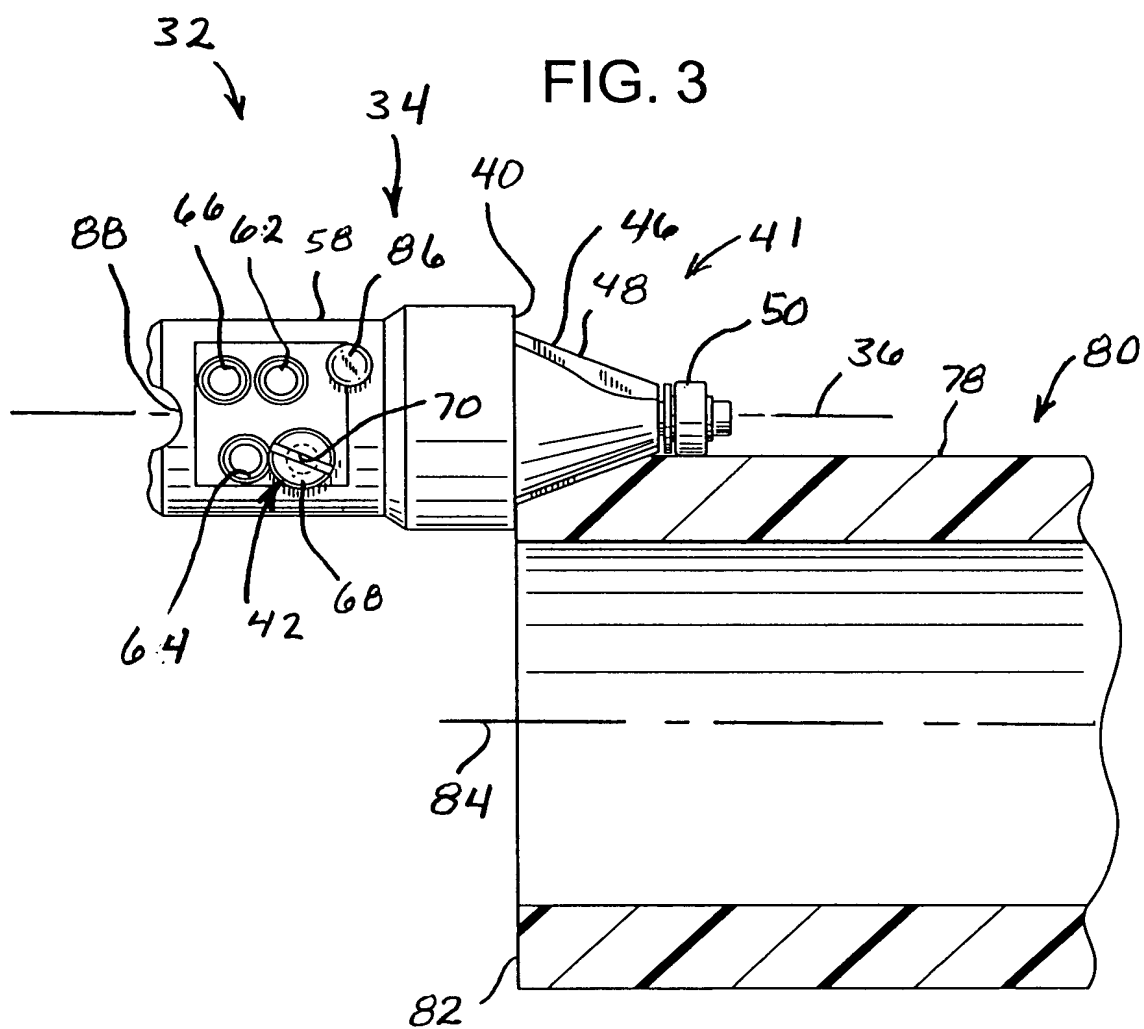


FIG. 3



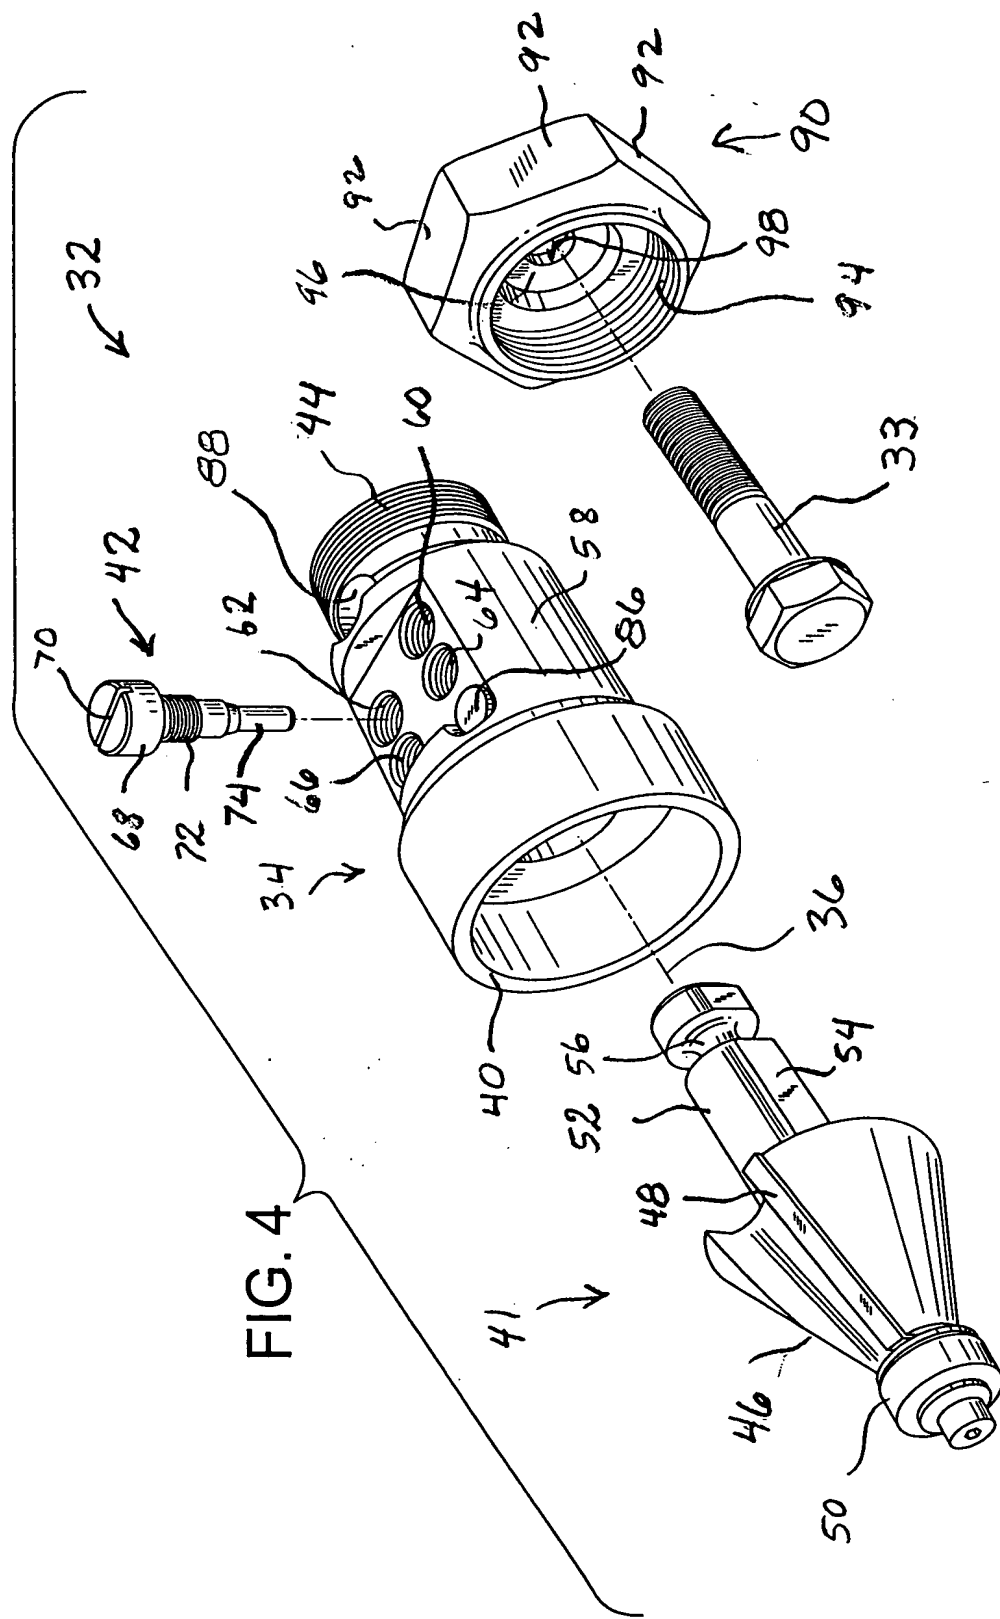


FIG. 4A

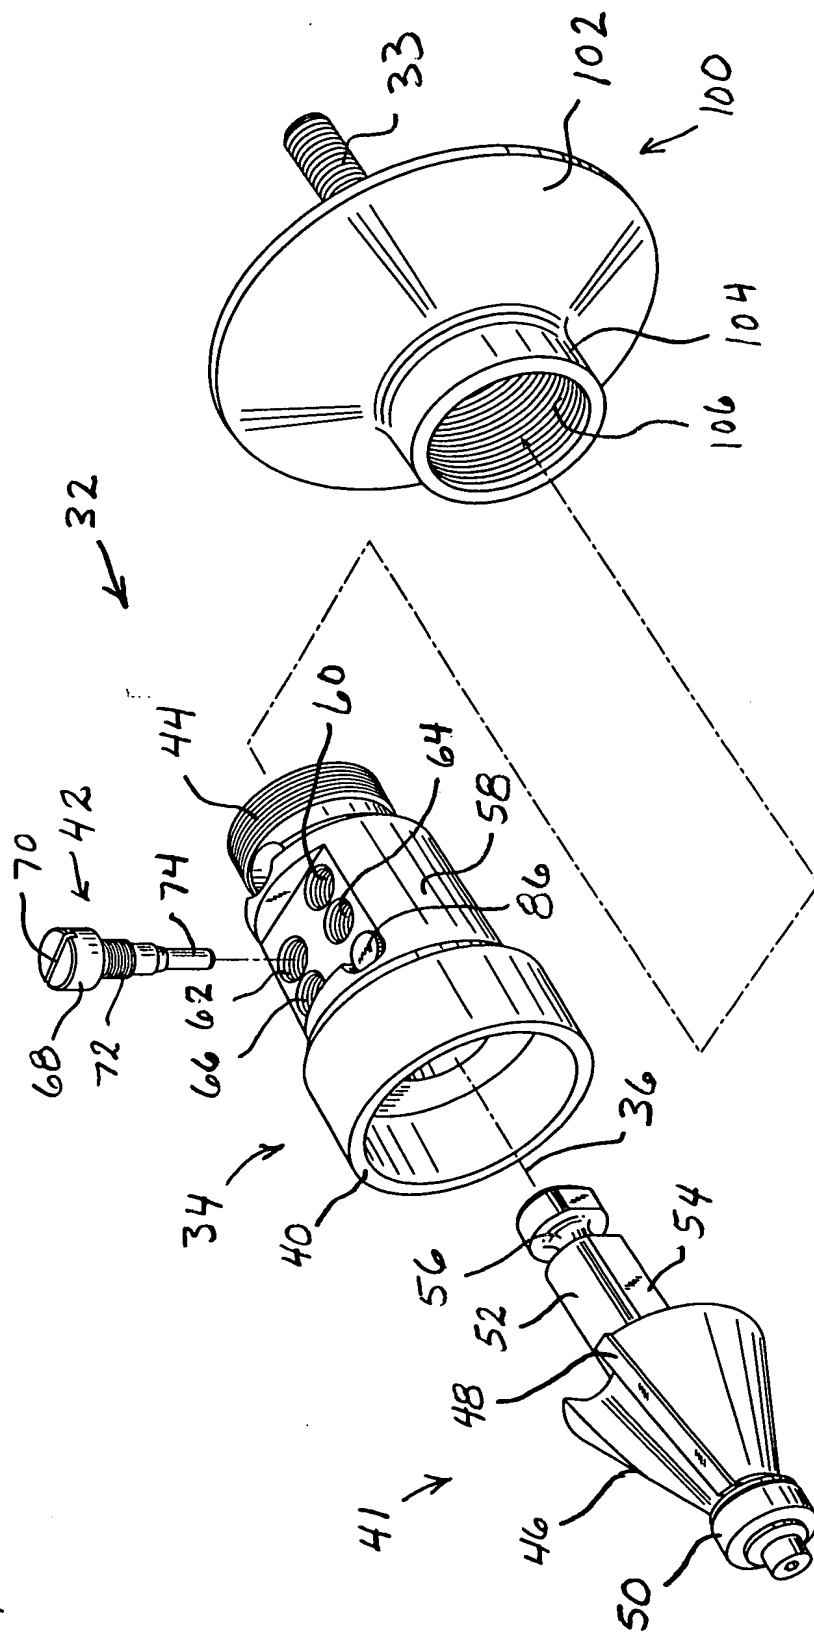


FIG. 5

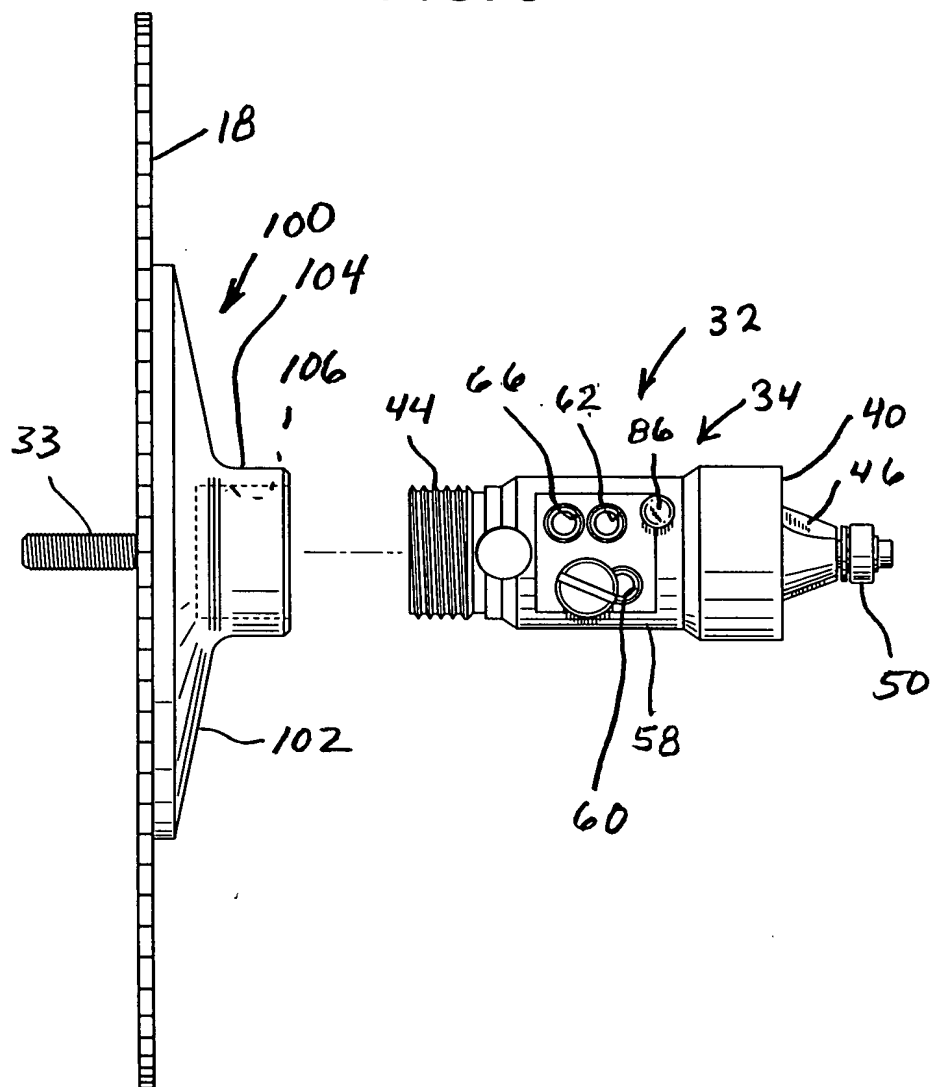


FIG. 6 is a perspective view of the device 32. The device 32 includes a front panel 40 with a display 42, buttons 60, 62, 64, 66, 68, 70, 86, and 88, a speaker 44, and a connector 50. The device is connected to a cable 110 and a component 112.

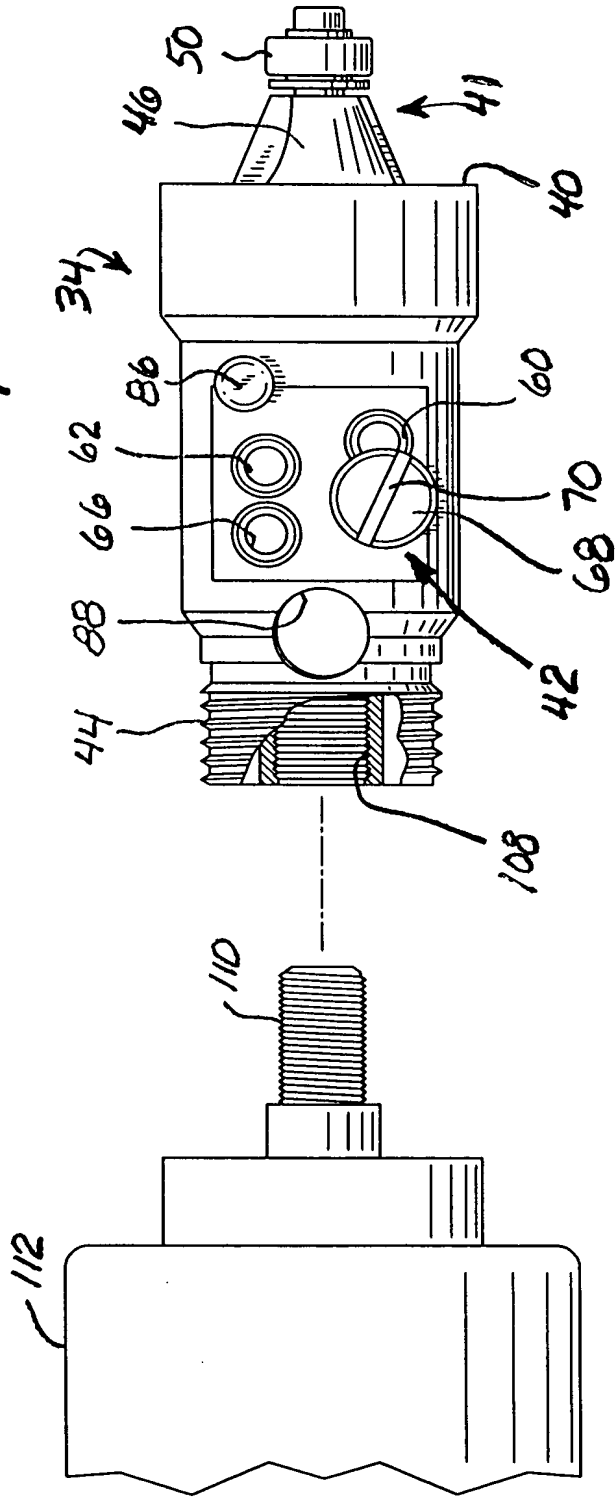
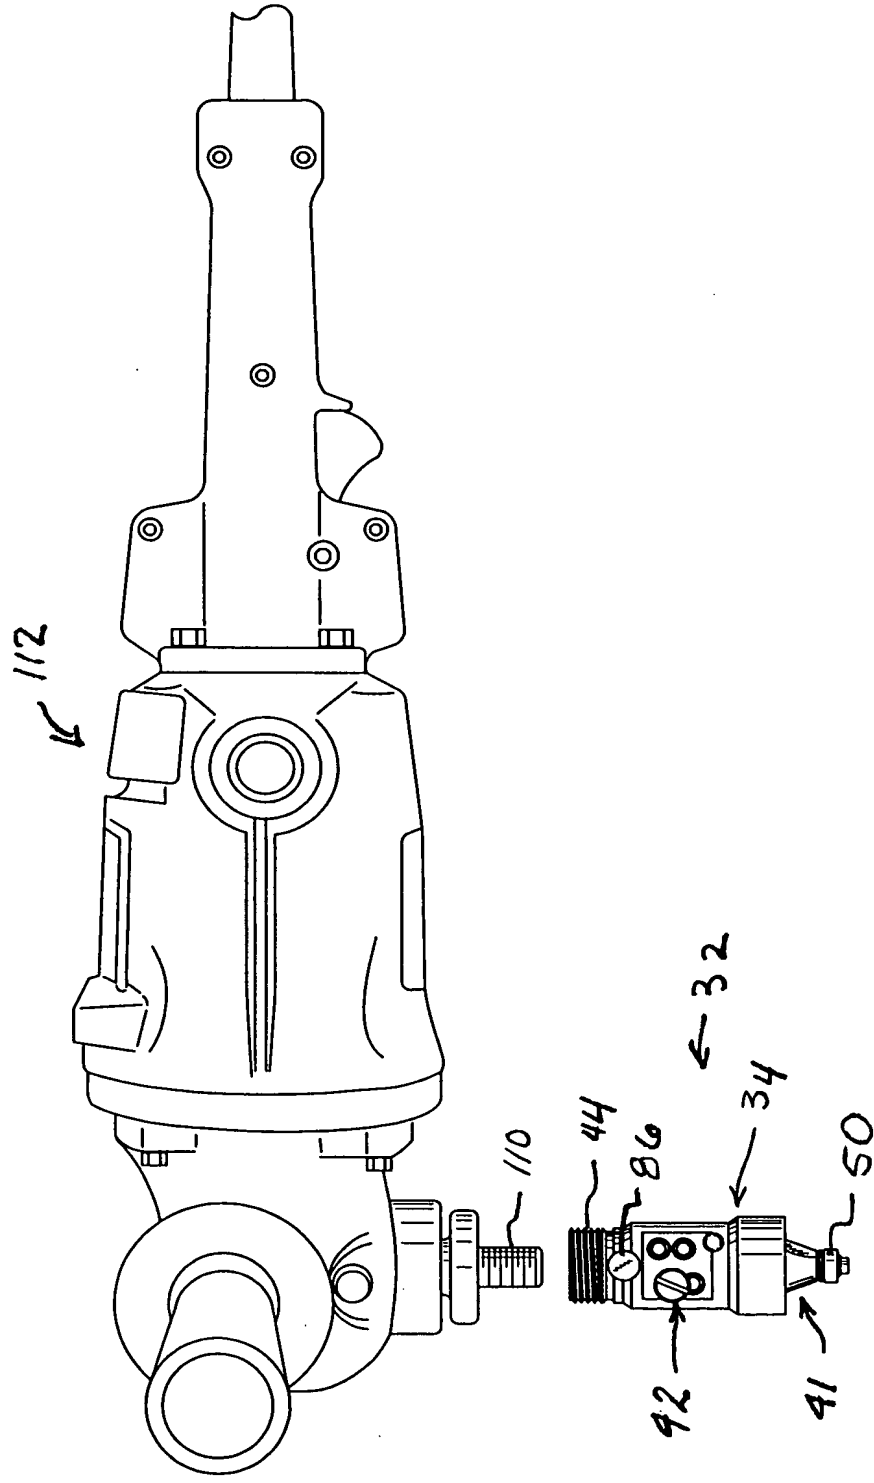


FIG. 7





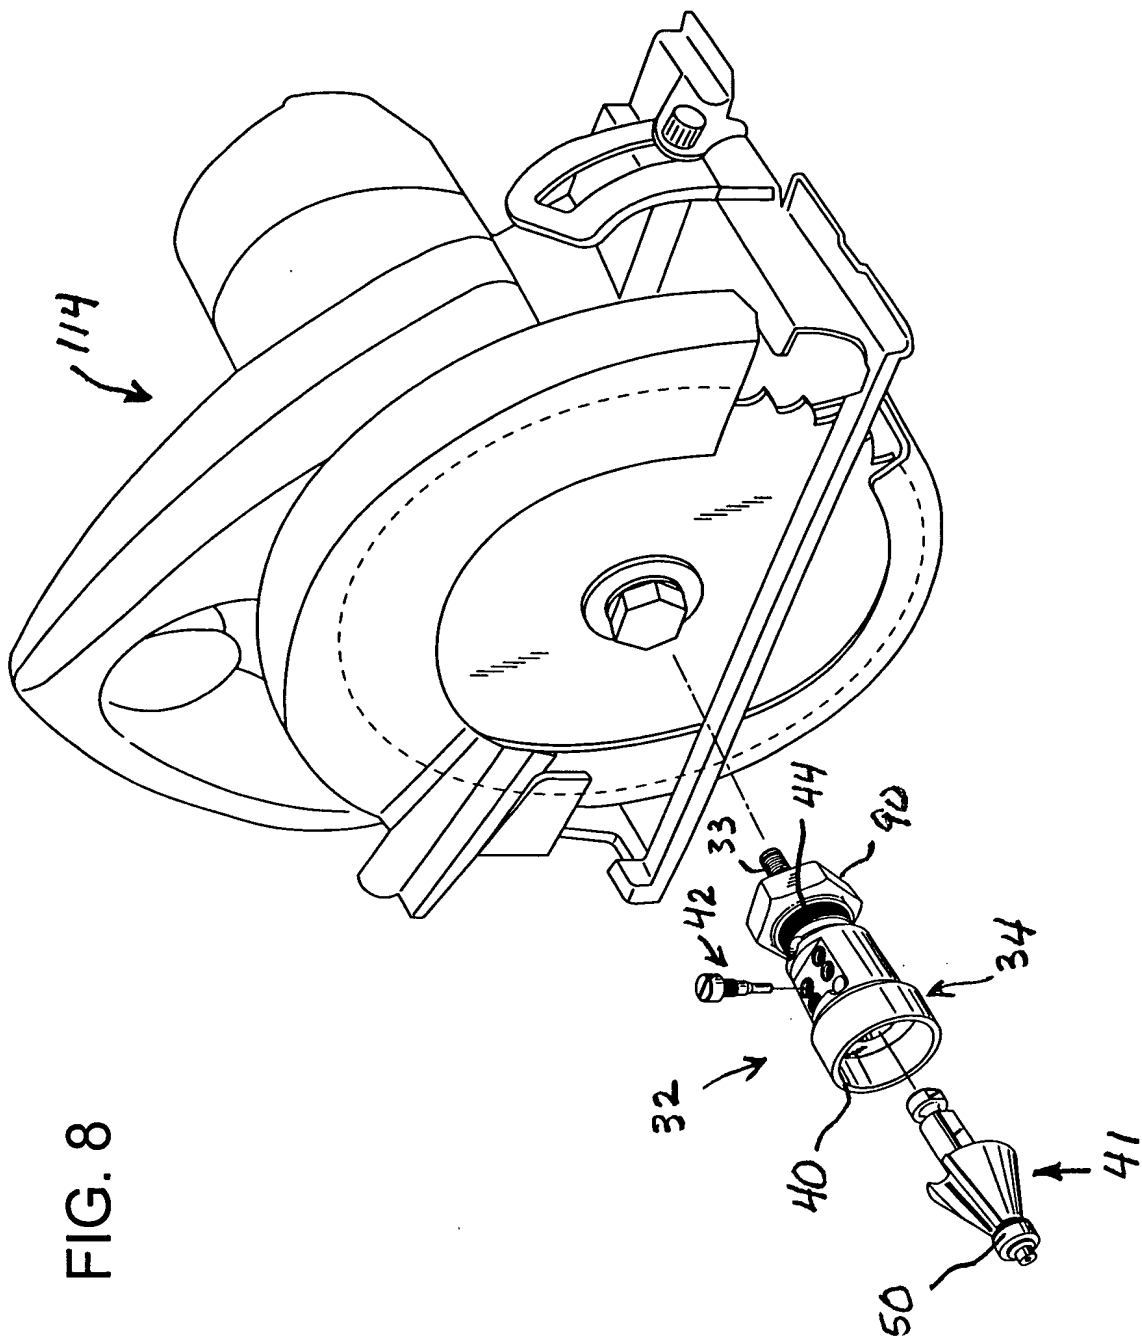


FIG. 8